


QUICK START GUIDE

FBX50C

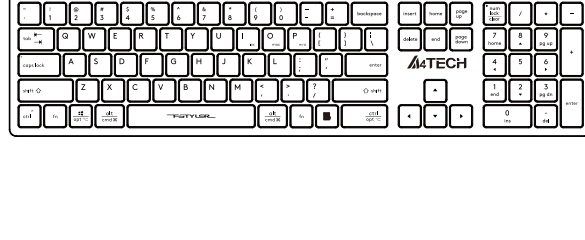

Bluetooth® / 2.4G

FSTYLER
COLLECTION

WHAT'S IN THE BOX

Bluetooth/2.4G
Wireless Keyboard

2.4G Nano
Receiver

Type-C
Charging Cable

USB
Extension Cable

User
Manual


THE FRONT



THE FLANK / BOTTOM



CONNECTING 2.4G DEVICE

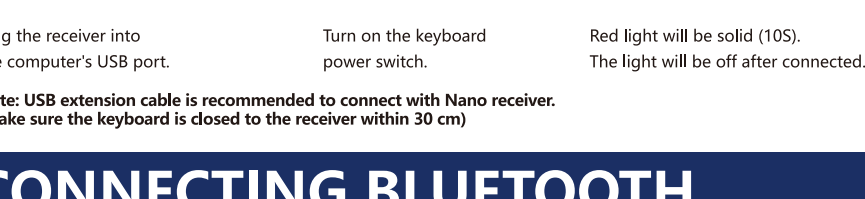


CONNECTING BLUETOOTH DEVICE 1 (For Mobile Phone/Tablet/Laptop)



CONNECTING BLUETOOTH DEVICE 2 (For Mobile Phone/Tablet/Laptop)



CONNECTING BLUETOOTH DEVICE 3 (For Mobile Phone/Tablet/Laptop)

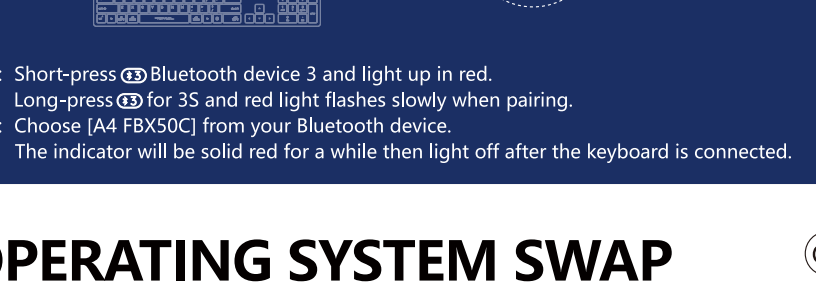

OPERATING SYSTEM SWAP

Windows / Android is default system layout.

System	Shortcut [Long-Press for 3S]	Device / Layout Indicator
iOS	+	Light will be off after flashing.
Mac	+	
Windows, Chrome, Android & HarmonyOS	+	

Note: The layout you used last time will be remembered. You can switch the layout by following the above step.

INDICATOR (For Mobile Phone/Tablet/Laptop)



Indicator	Red Light	Red Light	Red Light	Red Light
Multi-Device Switch				
Device Switch: Short-Press for 1S	Solid Light 10S	Solid Light 5S		
Pair Device: Long-Press for 3S	No Need to Pair	Pairing: Flashes Slowly Connected: Solid Light 10S		

FN MULTIMEDIA KEY COMBINATION SWITCH

 
FN Mode: You can lock & unlock Fn mode by short pressing FN + ESC by turn.



① Lock Fn Mode: No need to press FN key

② Unlock Fn Mode: FN + ESC

※ After pairing, FN shortcut is locked in FN mode by default,
and the locking FN is memorized when switching and shutting down.



OTHER FN SHORTCUTS SWITCH

Shortcuts	Windows	Android	Mac / iOS
+	Pause	Pause	Pause
+	Device Screen Brightness +	Device Screen Brightness +	Device Screen Brightness +
+	Device Screen Brightness -	Device Screen Brightness -	Device Screen Brightness -
+		Screen Lock	Screen Lock (iOS Only)
+	Scroll Lock	Scroll Lock	

Note: The final function refer to the actual system.


DUAL-FUNCTION KEY

Multi-System Layout

Keyboard Layout	Windows / Android (W / a)	iOS / Mac (ios / mac)
+	Switching Steps: ① Choose iOS layout by pressing Fn+I. ② Choose MAC layout by pressing Fn+O ③ Choose Windows / Android layout by pressing Fn+P.	
	Ctrl	Control ^
	Start	Option
	Alt	Command
	Alt (Right)	Command
	Ctrl (Right)	Option

USB TYPE-C RECHARGEABLE

⚠ Warning: Limite charge with 5V (Voltage)

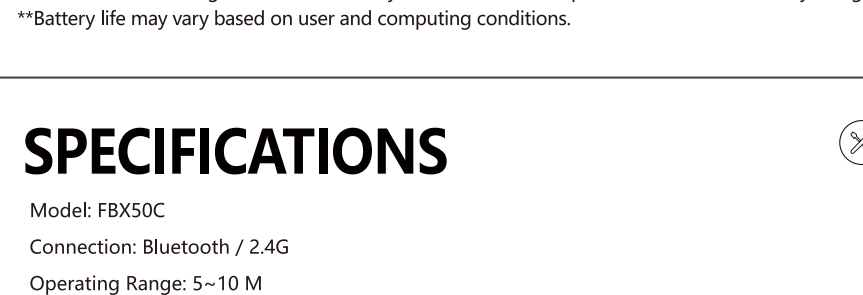

Built-in 300mAh rechargeable lithium battery, it can be used for up to 3~5 months when fully charged.
**Battery life may vary based on user and computing conditions.

SPECIFICATIONS

Model: FBX50C
Connection: Bluetooth / 2.4G
Operating Range: 5~10 M
Multi-Device: 4 Devices (Bluetooth x 3, 2.4G x 1)
Layout: Windows | Android | Mac | iOS
Battery: 300mAh Lithium Battery
Receiver: Nano USB Receiver
Includes: Keyboard, Nano Receiver, USB Extension Cable, Type-C Charging Cable, User Manual
System Requirements: Windows / Mac / iOS / Chrome / Android / Harmony OS...

Q & A

- Question** How to switch layout under different system?
Answer You can switch layout by pressing Fn + I / O / P under Windows | Android | Mac | iOS.
- Question** Does the layout can be remembered?
Answer The layout you used last time will be remembered.
- Question** How many devices can be connected?
Answer Interchange and connect up to 4 devices at the same time.
- Question** Does the keyboard remember the connected device?
Answer The device you connected last time will be remembered.
- Question** How can I know the current device is connected or not?
Answer When you turn on your device, the device indicator will be solid.
(disconnected: 5S, connected: 10S)
- Question** How to switch between connected Bluetooth device 1-3?
Answer By pressing the Bluetooth individual buttons ()
at the keyboard's top right corner.

WARNING STATEMENT

- The following actions may/will cause damages to the product.
- To disassemble, bump, crush, or throw into the fire, you may cause irrefutable damages in event of the lithium battery leakage.
 - Do not expose under the strong sunlight.
 - Please obey all local laws when discarding the batteries, if possible please recycle them.
Do not dispose of it as household garbage, it may cause a fire or an explosion.
 - Please try to avoid charging in the environment below 0°C.
 - Do not remove or replace the battery.
 - Please use the charging cable included in the package to charge the product.
 - Do not use any equipment with voltage exceeding 5V for charging.

EST. 1987
A4TECH

FSTYLER
COLLECTION



www.a4tech.com



Scan for E-Manual