





STYLER

WHAT'S IN THE BOX





Mouse





Charging Cable (Type-C)

User Manual

KNOW YOUR PRODUCT



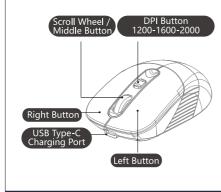


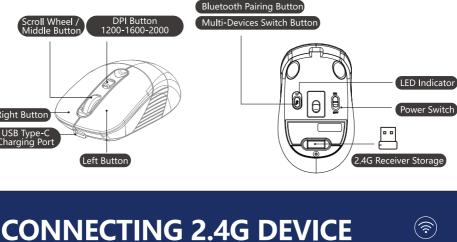







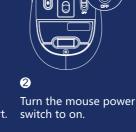



connected. **CONNECTING BLUETOOTH**

DEVICE 1 (For Mobile Phone/Tablet/Laptop) Blue Light





CONNECTING BLUETOOTH


(Indicator shows blue light



device, search and locate the BT name on device: [A4 FB10C].

Turn on the Bluetooth of your

A4 FB10C

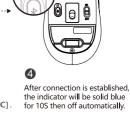



BLUETOOTH DEVICE












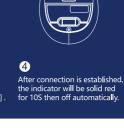







2.4G DEVICE






BLUETOOTH DEVICE 1 BLUETOOTH DEVICE 2

CHARGING & INDICATOR

≉ USB-A USB-C

SOLID RED: CHARGING NO LIGHT: FULLY CHARGED




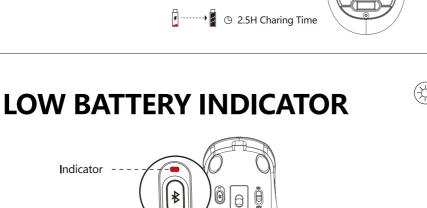

Q & A

Flashing Red light indicates when the battery is below 25%.

§)

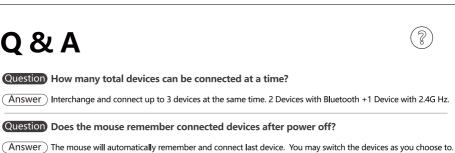

Question How to switch connected Bluetooth devices? Answer Repeat the procedure of connecting Bluetooth devices.

Question How do I know what device is currently connected to? Answer When the power is turned on, the indicator light will be displayed for 10S.



WARNING STATEMENT

- The following actions may/will cause damages to the product. 1. To disassemble, bump, crush, or throwing into fire, you may cause irrefutable damages in event of the lithium battery leakage.
- 3. Please obey all local laws when discarding the batteries, if possible please recycle it. Do not dispose it as household garbage, it may cause a fire or an explosion. 4. Please try to avoid charging in the environment below 0°C.

5. Do not remove or replace the battery.

2. Do not expose under the strong sunlight.







