


US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.
1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

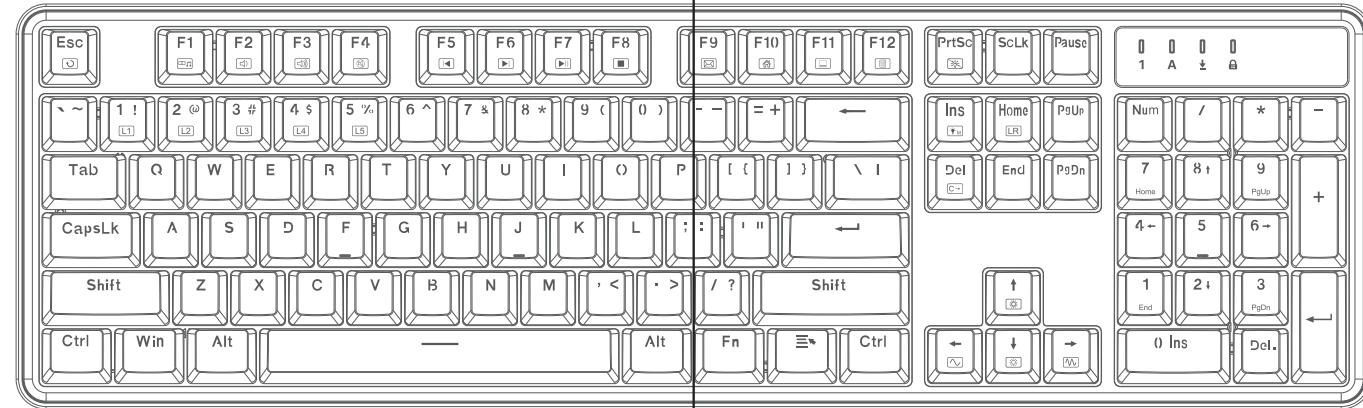

O.S Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ MAC O.S

CONNECTION

Wired connection, plug& play

Keyboard feature

Backlight

- 1. The default 20 backlight patterns switch by press [FN] + [INS] to cycling switch the light patterns. Press [FN] + [PrtSc] to turn ON/OFF the backlight
2. Press [FN] + [← / →] to adjust light rotating speed, total 5 levels
Press [FN] + [↑ / ↓] to adjust backlight brightness, total 5 levels
3. Backlight color switching: [FN] + [DEL] to cycling switch Red, Green, Blue, Yellow, Pink, Cyan, White, RGB
4. Gaming pre-set mode & backlight DIY: Press [FN] + [1-5] to enter relevant gaming pre-set mode, to DIY the backlight, on any of gaming pre-set mode, Press [FN] + [Home] to start recording, LED indicator will flashing till the recording completed, Continuously press the key to select the color you want to set, once key light color setting are completed, press [FN] + [Home] to save

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock

Restore factory settings


Press and hold [FN] + [ESC] for 3 seconds

Commands of key combinations with [FN] key

Table with 2 columns: Key combination and Function. Includes entries like FN+F1: Media player, FN+F2: Volume -, FN+F3: Volume +, FN+F4: Mute, FN+F5: Pre track, FN+F6: Next track, FN+F7: Play/Pause, FN+F8: Stop play, FN+F9: E-mail, FN+F10: Browser home page, FN+F11: My computer, FN+F12: Calculator.

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

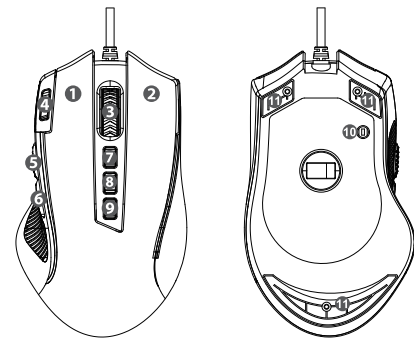

Button Instructions

- 1. Left mouse button.
2. Right mouse button.
3. Scroll wheel (clicked as middle mouse button).
4. Rapid fire button (Defaulted to three rapid clicks of the left mouse button).
5. Side key, defaulted function: Left Forward key on the keyboard.
6. Side key, defaulted function: Left Backward key on the keyboard.
7. DPI+ button (defaulted to speed up the cursor).
8. DPI- button (defaulted to slow down the cursor).
9. Light mode toggle key: The mouse switches between the 6 lighting modes for each click.

- 10. User mode toggle key: The mouse switches between the 5 user modes with each click.
11. Teflon foot pads: Large wear-resistant materials let the mouse move more smoothly.

Lighting Instructions

- 1. User mode indicator light: Located below the Scroll Wheel key.
Red ----- User mode 1
Blue ----- User mode 2
Green ----- User mode 3
Purple --- User mode 4
Yellow --- User mode 5
2. 5 colors indicator light:
Red ----- Gear 1 (500 DPI)
Blue ----- Gear 2 (1000 DPI)
Green ----- Gear 3 (2000 DPI)
Purple --- Gear 4 (3000 DPI)
Yellow --- Gear 5 (4000 DPI)

- 3. Lighting: Breathing, Wave, 7 color breathing, Full lighted, Flash, OFF.

Software Instructions

User can adjust the following settings through the software after downloading and installing it.

- 1. Adjust the DPI of the mouse at the user's discretion(range: 500-8000 DPI).
2. Adjust the polling rate of the mouse at the user's discretion(range: 125-250-500-00Hz).
3. Macros: Record up to 59 actions and trigger with one key.
4. Continuous keystroke function: Set the number of clicks and delay time.
5. Lighting: Adjust mouse lighting options.
6. Customize 9 mouse buttons.
7. Set 5 different user modes and switch between them with the button on the bottom of the mouse.

FAQ

- 1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports.
2. If the mouse is moving slowly, jumping or with delay, please try another surface.
Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



REDRAGON

S139 The Perfect Gaming Combo Mechanical Keyboard + Mouse Combo Set

User manual

封面

Table with 4 columns: Model (S139(7062+2850)), Name (说明书), Date (2024-8-6), and Page (1 OF 1). Includes a 'Remarks' section with dimensions and printing info, and a 'File Number' section. Bottom row includes 'Drawing' (邓子松), 'Review' (审核), 'Approval' (香敏琪), 'Version' (版本), and 'A.1'.

