

Dear user

electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.

1



4

O.S. Support

How to connect the keyboard with multiple devices

Wired Connection

2.4G Wireless Connection

64

Delete recorded macro setting:

Delete partial macro setting: Press [Rec], LED 1 and A flashes slowly, press the [G] key you want to delete macro, LED 1 and A flashes quickly, Press [Rec] again, the macro setting was deleted.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.)

Windows / MAC shortcut keys switching

Use MAC/WIN switch on the front side of keyboard.

Commands of key combinations with [FN] key

6

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.

When battery is low, the backlight will turn off, the power LED will blink red slowly to remind user to charge the keyboard.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn OFF.

Warning: Charging Input: 5V=2A

Built-in Li-ion battery 1 unit

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboard's USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.



Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences, (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



SHIVA PRO 87

3 MODES CONNECTION 87 KEYS
RGB BACKLIGHT GAMING KEYBOARD

Mechanical Gaming Keyboard
User manual

封面



Eastern Times
Tech