

US UK Dear user Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules. 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty. 3. Please fill out the warranty card. Warranty card is valid with the stamp of the retailer. 4. This warranty card will not be reissued if lost. Please keep it in a safe place. 1	Function Introduction 1. Installation: Plug & play, no need driver. 2. Keyboard interface: USB port, Full speed. 3. 25-Key roll-over: Q, A, Z, W, S, X, E, D, C, R, F, V, T, G, B, M, Space, Tab, Ctrl-L, Alt-L, Shift-L, ↑↓←→. 4. RGB backlighting effects: 1) FN+DEL, Neon mode in red, blue and green colors. 2) FN+INS, Spectrum mode in 7 colors. 3) FN+END, Enable or disable breathing mode of the backlight. 4) FN+HOME, static mode in one of 7 colors(red, green, blue, yellow, purple, cyan, white). 5) FN+PGUP, static mode in one of 3 color se quence (red-blue-green, green-red -blue, blue-green-red). 6) FN+PGDN, ON/OFF switch mode. 5. Brightness adjustment: 1) FN+↑, for brightness level +. 2) FN+↓, brightness level -. 6. Backlighting speed adjustment: 1) FN+→, speed up. 2) FN+←, speed down. 7. Win key lock function FN+WIN-L () for disable WIN key and menu key. Repeat to unlock. 2	Multi-media keys FN+F1 Open the media player FN+F2 Volume down FN+F3 Volume up FN+F4 Mute FN+F5 Stop FN+F6 Pre-track FN+F7 Play/ Pause FN+F8 Next track FN+F9 E-mail FN+F10 Home FN+F11 Open my computer FN+F12 Search FAQ 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer. 2. If you spill liquid on the keyboard, please remove keyboardsUSB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.  3	FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 4
--	--	--	--

PT Prezado usuário, Obrigado por escolher a marca REDRAGON . Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia. 3. Preencha o cartão de garantia. O cartão de garantia é válido com o carimbo do revendedor. 4. Esse cartão de garantia não será reemitido em caso de perda. Guarde-o em um local seguro. 5	Descrição das funções 1. Instalação: Plug & play, sem necessidade de driver. 2. Interface do teclado: Porta USB, velocidade total. 3. 25-Key roll-over: Q, A, Z, W, S, X, E, D, C, R, F, V, T, G, B, M, Espaço, Tab , Ctrl-L, Alt-L, Shift-L, ↑ ↓ ←→. 4. efeitos de iluminação de fundo em RGB: 1) FN+DEL, modo neon nas cores vermelho, azul e verde. 2) FN+INS, modo espectro em sete cores. 3) FN+END, ativa ou desativa o modo variável da iluminação de fundo. 4) FN+HOME, modo estático em uma das sete cores(vermelho, verde, azul, amarelo, roxo, ciano e branco). 5) FN+PGUP, modo estático em uma das três sequências de cores (vermelho-azul-verde, verde-vermelho-azul, azul-verde-vermelho). 6) FN+PGDN, alterna entre LIGADO/DESLIGADO. 5. Ajuste de brilho: 1) FN+↑, para aumentar o brilho. 2) FN+↓, para reduzir o brilho. 6. Ajuste da velocidade da iluminação de fundo: 1) FN+→, aumenta a velocidade. 2) FN+←, reduz a velocidade. 7. Função de bloqueio da tecla Win FN+WIN-L () para desativar a tecla WIN e a tecla de menu. Repita para desbloquear. 6	Teclas multimídia FN+F1 Reprodutor de mídia FN+F2 V- FN+F3 V+ FN+F4 Mudo FN+F5 Parar FN+F6 Faixa anterior FN+F7 Reproduzir/pausar FN+F8 Próxima faixa FN+F9 Email FN+F10 Principal FN+F11 Abrir meu computador FN+F12 Pesquisar Dúvidas frequentes 1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente, ou experimente outra porta USB no computador. 2. Se ocorrer o derramamento de líquido sobre o teclado, remova imediatamente o cabo USB que liga o teclado ao computador. Seque o excesso de líquido e deixe o teclado em um local aquecido (por exemplo, sob uma lâmpada) para deixar que seque naturalmente antes de utilizá-lo novamente.  7	 REDRAGON NETHERBANE REDRAGON WIRED BACKLIGHTING GAMING KEYBOARD Wired Gaming Keyboard User manual
--	--	--	--

封面

型号	K521-RGB / 7326		备注： 尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷				
名称	说明书						
日期	2024-7-2						
页码	1 OF 1		文件编号				
绘图	雷国建	审核	香敏琪	核准		版本	A.1