


US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

- Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

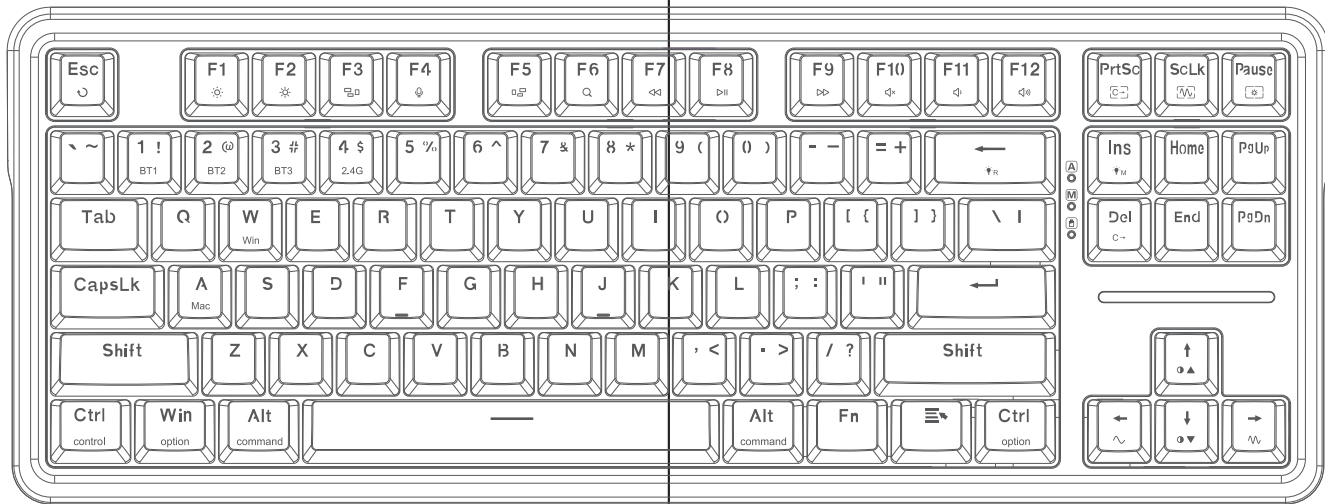

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multi-ple devices

A: Cap indicator

M: Mode indicator

Battery indicator

2.4G/OFF/BT mode switch

Type C port

2.4G receiver storage slot

Wired Connection

[2.4G/OFF/BT] switch on "OFF".  
Connect the keyboard to computer with USB cable.  
The computer will recognize and configure the keyboard automatically.

2.4G Wireless Connection

- [2.4G/OFF/BT] switch on "2.4G", the LED M flashes in Cyan, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically.
- If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[4] for 3 seconds, the LED M flashes in Cyan, plug the USB receiver into computer USB port, after paired the LED will turn to steady on.

Bluetooth Connection

- [2.4G/OFF/BT] switch on "BT".
- Press and hold [FN]+[1/2/3] for 3 seconds, M flashes in Blue[1] or Red[2] or Green[3] quickly.  
Turn on Bluetooth function and searching for available device, It will find "BT3.0 Keyboard and BT5.0 Keyboard" device names. Select a Bluetooth name to pair, after paired the LED will turn to steady on.
- To switch the Bluetooth connections between BT1/BT2/BT3, press [FN]+ [1/2/3].

Product Features

Backlight

- The default 20 backlight patterns switch by press [FN] + [INS] to cycling switch the light patterns. Press [FN] + [Space bar] to turn ON/OFF backlight.
- Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.  
Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
- Backlight color switching: press [FN] + [DEL] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB(Available on limited light patterns).
- Lighting bar adjustment: press [FN] + [Pause] to cycling switch 4 lighting modes, [FN] + [ScLk] to adjust lighting flowing speed, [FN] + [PrtSc] to adjust lighting color.
- Backlight DIY: Press [FN] + [Back space] to enter preset gaming backlight mode, [ESC] \ [A] [S] [W] [D] [↑] [↓] [←] [→] lights on by default, Press [FN] + [Back space] again to start recording, "CAPS" LED will flashing till the recording completed, Continuously press the key to select the color you want to set([FN] key not support set the light color), once key light color setting are completed, press [FN] + [Back space] to save.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.)

Windows / MAC shortcut keys switching

Press [FN] + [W] to switch to Windows shortcut keys.  
Press [FN] + [A] to switch to MAC shortcut keys.

Commands of key combinations with [FN] key

| WINDOWS O.S.                                       | MAC O.S.                           |
|----------------------------------------------------|------------------------------------|
| FN+F1: Screen brightness -                         | F1: Screen brightness +/- FN+F1=F1 |
| FN+F2: Screen brightness +                         | F2: Screen brightness +/- FN+F2=F2 |
| FN+F3: Multiple windows                            | F3: Multiple task / FN+F3=F3       |
| FN+F4: Speech recognition<br>(O.S. win10 or newer) | F4: Siri / FN+F4=F4                |
| FN+F5: Show desktop                                | F5: Show desktop / FN+F5=F5        |
| FN+F6: Search                                      | F6: Search / FN+F6=F6              |
| FN+F7: Pre track                                   | F7: Pre track / FN+F7=F7           |
| FN+F8: Play/Pause                                  | F8: Play/Pause / FN+F8=F8          |
| FN+F9: Next track                                  | F9: Next track / FN+F9=F9          |
| FN+F10: Mute                                       | F10: Mute / FN+F10=F10             |
| FN+F11: Volume -                                   | F11: Volume down / FN+F11=F11      |
| FN+F12: Volume +                                   | F12: Volume up / FN+F12=F12        |

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.

When battery is low, the backlight will turn off, the power LED will blink red slowly when pressed a key.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn to steady on Green.

Battery power indicator: Press and hold [FN] + [≡▶] to show the battery level, [1-0] will lights on to show currently battery level, release to back to current backlight mode.

Battery power indicator: Press and hold [FN] + [I] to show the battery level, [1-0] will lights on to show currently battery level, release to back to current backlight mode.

FAQ

- If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
- If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

**CAUTION:**

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

|    |                      |                                                |     |      |  |                      |  |
|----|----------------------|------------------------------------------------|-----|------|--|----------------------|--|
| 型号 | K728WBB-RGB-PRO/7386 | 备注：尺寸：100x100mm(折页)<br>材质：80g书写纸<br>印刷：单黑色双面印刷 |     | 文件编号 |  | Easternlimes<br>Tech |  |
| 名称 | 说明书                  |                                                |     |      |  |                      |  |
| 日期 | 2024-11-15           |                                                |     |      |  |                      |  |
| 页码 | 1 OF 1               | 版本                                             |     | A.1  |  |                      |  |
| 绘图 | 邓子松                  | 审核                                             | 香敏琪 | 核准   |  |                      |  |

封面