



US UK Dear user Thank you for you choosing REDRAGON brand, to protect your rights and for better customer service, we ask that you to warranty our rules. - Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, hard to use, or damage caused by misuse, including but not limited to water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. - Consumable parts (such as foot stick) and spare parts replacement are not included in our warranty. OS support Windows XP/Vista/Win7/Win8/Win10/Win11 Button Description 1. Left mouse button. 2. Right mouse button. 3. Scroll wheel and middle button. 4. Rapid fire button (one click equals three left mouse button clicks). 5. DPI+ button (defaulted to speed up the cursor). 6. DPI- button (defaulted to slow down the cursor). Side Button 7. Side button 1 8. Side button 2 9. Side button 3 10. Side button 4 1 2 3	- Side button 5 - Side button 6 - Side button 7 - Side button 8 - Side button 9 - Side button 10 - Side button 11 - Side button 12 - Working Mode button (used to switch among the two working modes) - Power Switch: ECO (working without backlight) / OFF / ON (working with backlight) Basic Operation How to Connect the Mouse with a Computer Wired Connection 1. Take out the USB to USB-C cable in the package and connect the mouse with your computer. 2. Slide the power switch on the bottom of the mouse to Power ON or ECO. 3. The computer will recognize and configure the mouse automatically. 4. The mouse will be ready for use when the configuration is finished. The LED of the LOGO and the lower edge will light on then if the power switch on the bottom of the mouse to Power ON with LED ON. 5. The mouse is under recharging whatever the power switch is put to On with or without LED ON. The scroll wheel will light up if the power switch is put to Power ON with LED ON. And it does not light up if the power switch is put to Power On without LED. It may take about four hours for the mouse to be fully recharged. Wireless Connection 1. Take out the USB receiver in the package and plug it into any available USB port on your computer. 2. Slide the power switch on the bottom of the mouse to Power On with LED ON or Power On without LED. 4 5	Note: Slide the power switch on the bottom of the mouse to OFF for long term storage. How to Reconnect the Mouse the with the USB Receiver Please download the software on www.redragonzone.com for this mouse. You can get more functions and settings after software installation. 1. The DPI value can be set from 100 to 16000 DPI. 2. Continuous keystroke function: Set the number of clicks and delay time. 3. Backlight mode of the LOGO: Steady ON / OFF. 4. Backlight mode of the side-edge: Steady ON / OFF. 5. 18 of the mouse buttons can be remapped to various actions. 6. Polling rate: 125Hz/250Hz/500Hz/1000Hz default, working mode 1 was set to 125Hz and working mode 2 was set to 1000Hz. 7. For each of the two working modes, the mouse buttons can be set independently. 8. Battery percentage indication: Battery percentage information is shown on the main interface of software. Features Auto Sleep and Smart Shutdown The mouse will sleep in eight minutes if there is no operation or when you shut down the computer or unplug the USB receiver. You can wake it up by clicking any mouse button except the DPI+ and DPI- buttons. 5 DPI level with indicator Press DPI+ and DPI- button can be switch mouse DPI level among 1000 (4 LED OFF) /2000 (1 LED ON)/4000 (2 LED ON)/8000 (3 LED ON) /16000 (4 LED ON), defaulted as 1000 DPI. Low Battery Indication The scroll wheel light will flash in red when battery is low. Backlight Effects (set via software) LOGO Effects: Steady ON, Respiration, Neon, OFF. LED Effects: Steady ON, Respiration, Steaming, OFF. 6	FAQ - If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. - If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended. FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. California Proposition 65 WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] [Exposure - www.P65Warnings.ca.gov] 7	8
BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating conditions. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Falling to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. PT Prezado usuário, Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em fontes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pé) e a substituição de peças avulsas não estão incluídas em nossa garantia. 9 10	Compatibilidade com OS Windows XP/Vista/Win7/Win8/Win10/Win11 Descrição dos botões 1. Botão esquerdo do mouse. 2. Botão direito do mouse. 3. Botão da rotação e botão do meio. 4. Botão de disparo rápido (um clique equivale a três cliques no botão esquerdo do mouse). 5. Botão de aumento do DPI (o valor padrão aumenta a velocidade do cursor). 6. Botão de redução do DPI (o valor padrão reduz a velocidade do cursor). LADO 7. Botão lateral 1 8. Botão lateral 2 9. Botão lateral 3 10. Botão lateral 4 11. Botão lateral 5 12. Botão lateral 6 13. Botão lateral 7 14. Botão lateral 8 15. Botão lateral 9 16. Botão lateral 10 17. Botão lateral 11 18. Botão lateral 12 Operação básica: Como conectar o mouse a um computador Conexão com fio 1. Retire o cabo USB C da embalagem e conecte o mouse ao computador. 2. Deslize o interruptor de energia na parte inferior do mouse para a posição Power On (ligado) ou ECO. 3. O computador vai reconhecer e configurar o mouse automaticamente. 4. O mouse estará pronto para uso quando a configuração estiver concluída. O LED do LOGO/PTO e a borda inferior acenderão se o interruptor de energia na parte inferior do mouse estiver na posição Power On com o LED aceso. 11 12	Como trocar o modo de funcionamento Há dois modos de funcionamento no mouse. Você pode alternar o modo de funcionamento com o botão de modo, localizado na parte inferior do mouse. Quando você pressionar o botão de modo, a roda piscará em azul violeta quatro vezes rapidamente ou lentamente, e a velocidade de leitura do mouse será definida em 125 Hz ou 1000 Hz, respectivamente. O valor em Hz, os efeitos da iluminação de fundo as funções dos botões podem ser definidos por meio do software em cada modo de funcionamento. Como recarregar a bateria Quando a bateria estiver fraca, recarregue a tempo. Retire o cabo USB para o mouse e conecte o mouse a qualquer porta USB. Enquanto a bateria estiver sendo recarregada, a roda piscará acesa e piscará primeiro em vermelho (se a carga da bateria estiver muito baixa), depois em amarelo e, finalmente, passará para acesa em verde quando a carga da bateria estiver completa. Enquanto isso, a borda lateral acenderá e se expandirá da parte de trás para a frente em vermelho, até que a carga da bateria esteja completa. A bateria poderá ser recarregada por mais de 300 ciclos. E você poderá usar o mouse enquanto a bateria estiver sendo carregada. Observação: Deslize o interruptor de energia na parte inferior do mouse estiver para a posição OFF (desligado) para armazenamento por longos períodos. Como selecionar o DPI Os dois botões na parte superior do mouse estão configurados como DPI+ e DPI- por padrão. Os quatro indicadores de DPI em vermelho próximos dos botões mostram o valor em DPI correspondente, conforme indicado abaixo: On quatro indicadores de DPI em vermelho próximos		