


REDRAGON

Redragon Harrow

 
 
 
Wireless gamepad

User Manual



A black wireless gamepad with a D-pad on the left, two analog sticks, and a central fire button. The right side features four action buttons labeled 1, 2, 3, and 4 in different colors. The Redragon logo is printed in red on the top center of the device.

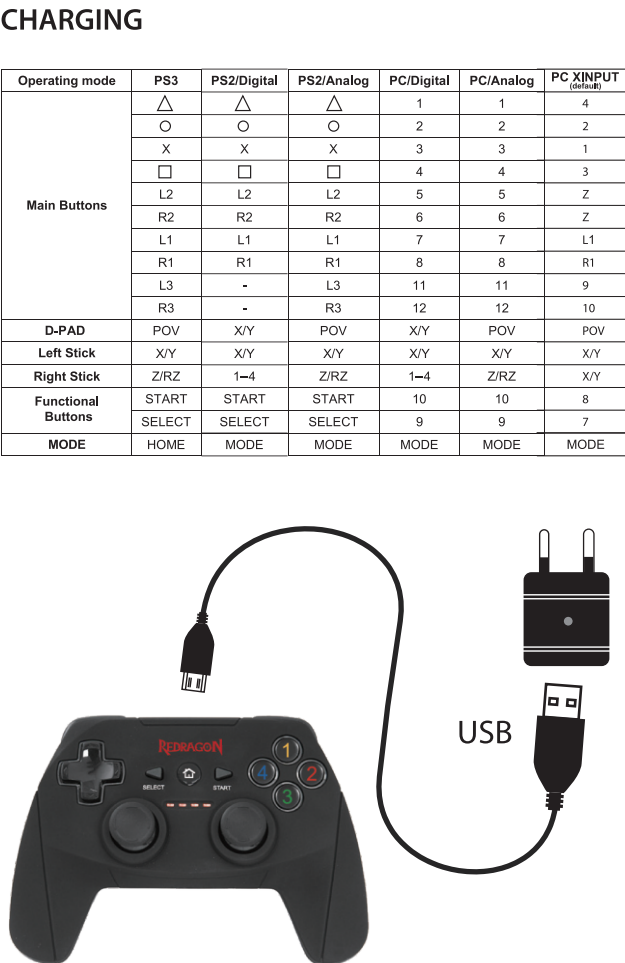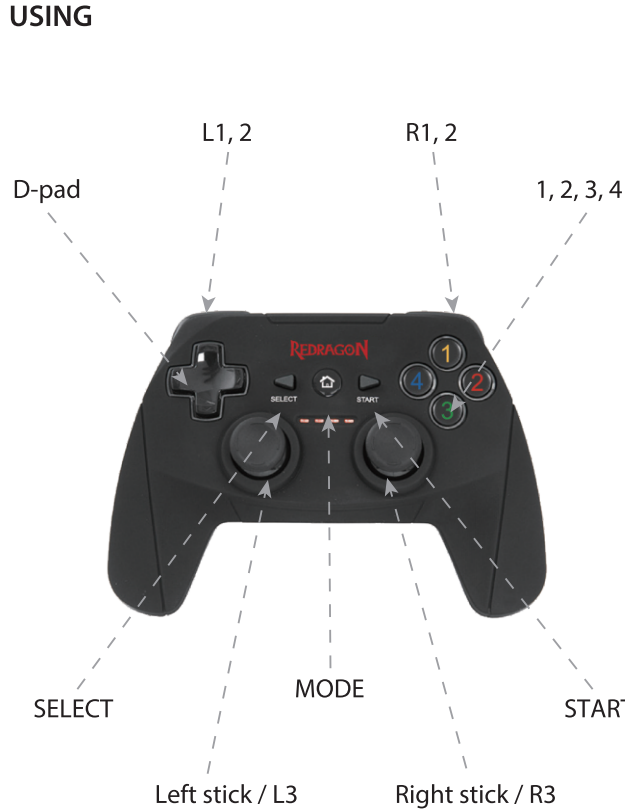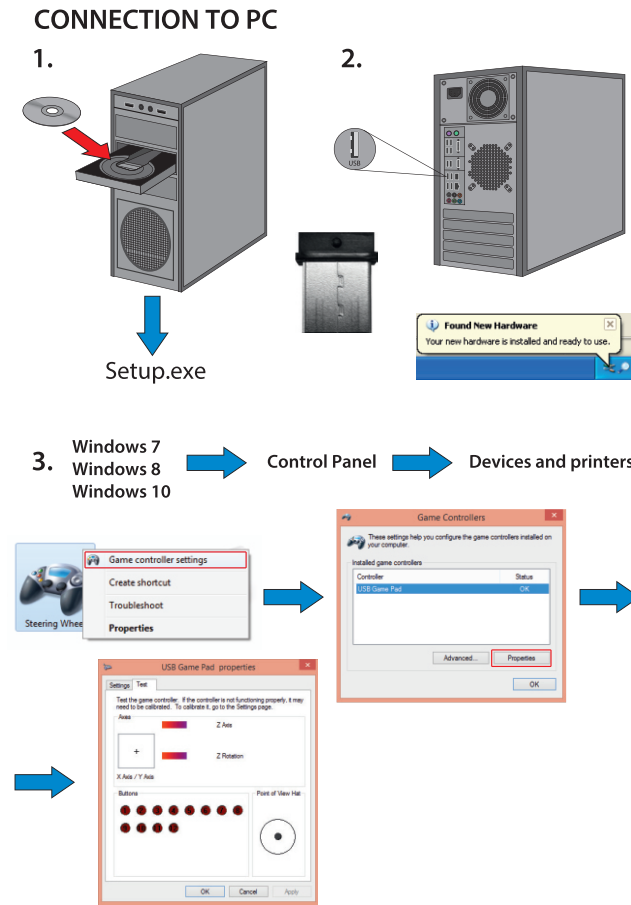

EN Wireless gamepad

Declaration of Conformity

Operation of device (device) may be affected by strong static, electrical or high-frequency fields (radio installations, mobile telephones, microphones, electrostatic discharge) (f) occurs. To increase the distance from the device causes the interface.

Disposal of batteries, electrical and electronic equipment

This sign on the product, its batteries or package indicates that the product cannot be disposed together with domestic waste. It should be delivered to an appropriate collection point for the collection of used electrical and electronic recycling company.

Terms and conditions of safe and efficient use of the product

Usage precautions

Use the product for its intended purpose only.

Do not disassemble. This product does not contain parts that are entitled to self-sufficient repair. On the question of maintenance and replacement of a failed item apply to a dealer or authorized service center. Do not attempt to repair the product make sure that it is unbroken and there are no freely moving objects inside the product.

Keep away from children. In case of mechanical damage to the product make sure that it is unbroken and there are no freely moving objects inside the product.

Keep away from humidity. Never immerse the product in liquids.

Keep away from vibrations and mechanical stresses, which can cause mechanical damage to the product. In case of mechanical damage to warranties are provided.

Do not use in the presence of visual damage. Do not use when the product is obviously damaged or if there is any damage to the product.

Do not use the product at temperatures above and below recommended temperatures (operating temperature range of mechanical damage to warranties are provided).

Do not use in the presence of humidity, under the conditions of humidity evaporation, as well as in hostile environment.

Do not put into the mouth.

Do not use the product for industrial, medical or manufacturing purposes.

In case when the shape of the product was planned to be constructed in subzero temperatures, then before the use of the product must be placed in the freezer (-10 to -20 to 60/77) within 3 hours.

 
Do not use the device each time, when it is not planned to use it for extended period of time.

Do not use to drive the vehicle, if it is diverted attention, and in other cases when the law obliges you to turn off the device.

Specifications

Device: Wireless gamepad, 2.4 GHz, Compatibility: Windows XP/Vista/7/8/10/
Xbox Series X/S, Active buttons: 12 + 2 analogue joysticks. Operation range: 7 m; hat switch, 4 vibration feedbacks, 2 built-in vibration motors, 8-way D-Pad. Power supply: built-in Li-Ion battery, 1000mAh, 3.7V.

The image displays the Redragon Harrow gaming controller and its manual. The controller is black with a symmetrical design. It features a D-pad on the left, two large analog sticks in the center, and a set of four action buttons (colored yellow, blue, red, and green) on the right. Above the right analog stick are three additional buttons labeled 'SELECT', 'HOME', and 'RESET'. The Redragon logo is printed in red on the top center of the controller. The manual cover is white with a large, stylized red dragon head logo at the top. Below the logo, the brand name 'REDRAGON' is written in a bold, black, serif font. The title 'Redragon Harrow' is prominently displayed in a large, bold, black sans-serif font. Underneath the title, the text 'Control de Juego Inalámbrico' (Wireless Game Controller) is written in a smaller font, followed by 'HARROW', 'Modelo G508', and 'Marca: Redragon'. At the bottom of the manual cover, the title 'Manual de Usuario' (User Manual) is centered, with the instruction 'LEA ESTE MANUAL ANTES DE USAR EL PRODUCTO' (READ THIS MANUAL BEFORE USING THE PRODUCT) below it. At the very bottom of the manual cover, there is a CE mark and a RoHS compliance logo.

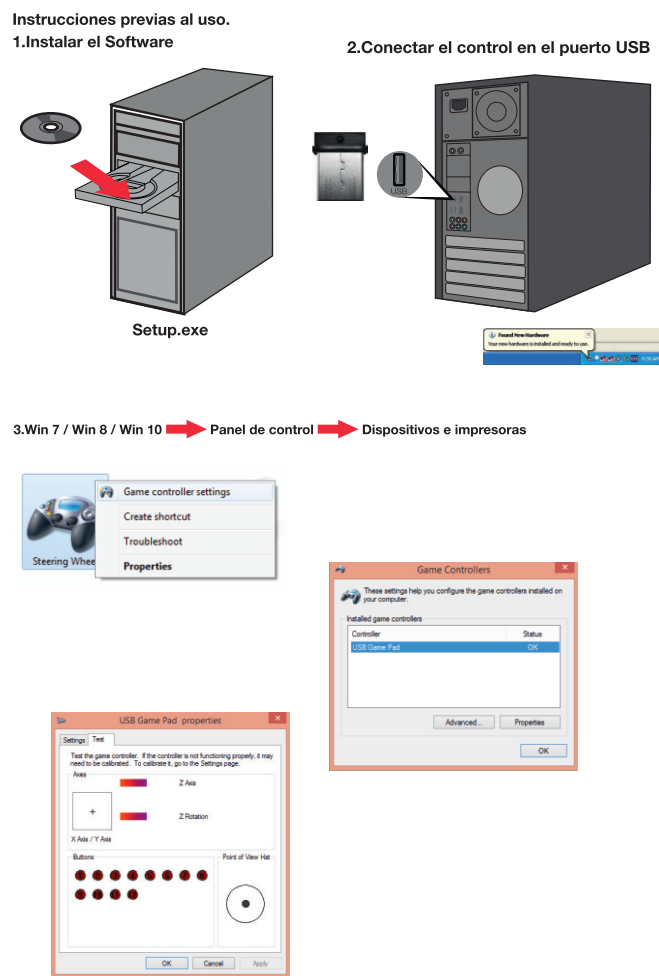

Modo de operación	PS3	PS2/Digital	PS3/Analogico	PS3/Digital	PS3/Analogico	PC (XIN/PT)
					1	14
					2	22
					3	3
					4	4
					5	5
					6	6
					7	7
					8	8
					11	11
					12	12
					10	10
Palanca izquierda	X/Y	X/Y	X/Y	X/Y	OV	OV
Palanca Derecha	Z/R2	1-4	Z/R2	1-4	2/R2	OV
Función de Botones	START	START	START	START	10	8
	SELECT	SELECT	SELECT	SELECT	9	7
Modo	HOME	MODE	MODE	MODE	MODE	MODE

Gracias por elegir la marca **Ignaceo**. Diseñamos este producto pensando en su satisfacción, nuestra intención es proveer los accesorios de videojuegos que puedan entregar una buena experiencia de juego para los usuarios.

Sistema Operativo.
Este producto es compatible con Windows y PS3.

Especificaciones de construcción.
Interface: USB
Botones: 12 + 2 joysticks.
Vibración: 2 motores de vibración (Derecha, Izquierda).

Este dispositivo puede ser afectado por campos de estática, eléctricos o alta frecuencia (dispositivos de radiofrecuencia, teléfonos móviles, microondas y descargas electrostáticas). Si ocurre, intente aumentar la distancia de los dispositivos que causan la interferencia.

Eliminación de las baterías o el equipo electrónico

Este signo en el producto, indica que el producto no se puede desachar junto con los desechos domésticos. Debe ser entregado a una compañía de reciclaje adecuada.



Términos y condiciones de uso seguro específico del producto

Precauciones de uso:

- Utilice el producto únicamente para el propósito previsto.
- No lo desarme. Este producto no contiene piezas que tengan derecho a la reparación autorizada. Sobre la cuestión del mantenimiento y el reemplazo del producto defectuoso se aplicará una garantía, mientras que reobren el producto se cercioran de que está intacto y no hay objetos libremente móviles dentro del producto.
- Manténgase alejado de los niños menores de 3 años. Pueden conectar piezas pequeñas.
- Manténgase alejado de la humedad. Nunca sumerja el producto en líquidos.
- Manténgase alejado de las vibraciones y de las tensiones mecánicas, lo que puede causar daños mecánicos en el producto. En caso de daños mecánicos no se proporciona ninguna garantía.
- No lo utilice en presencia de daños visuales. No utilizar cuando el producto es obviamente defectuoso.
- No utilice el producto bajo condiciones de la evaporación, así como en ambiente hostil.
- En el caso que el producto haya sido expuesto a temperaturas bajas cero, antes de funcionar el producto deberá estar en lugares templados (16 a 25 °C) por lo menos 3 horas.
- Aplique el dispositivo, cuando no esté previsto usarlo durante un período de tiempo prolongado.
- No utilice el dispositivo mientras conduce el vehículo, si se desvía la atención, y en otros casos cuando la ley lo obliga a apagar el dispositivo.

Especificaciones:

Interfaz: radio. Frecuencia de operación: 2,4 GHz. Compatibilidad: Windows XP/Vista/7/8/10/Playstation 3.Botones activos: 12+2 joysticks analógicos. Resolución de operación: 7 m. Talla switch: 12x2 cm. 2 motores. D-Pad de 8 vías. Alimentación: batería de Li-Ion 3.7 V 550 mAh incluye LEDs.

En PC:

- 1) Indica modo Xinput
- 2) Indica modo DirectPlay

En PS3:

- 1-4) Indica en qué posición de la PS3 está conectado el gamepad.



 
 
 
Redragon Harrow

Wireless gamepad

User Manual



© 

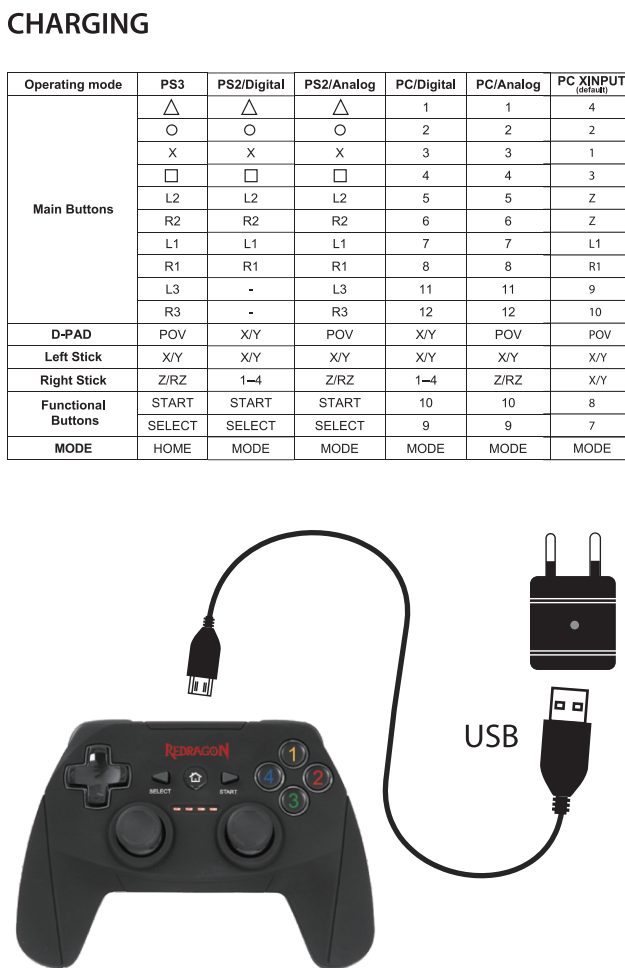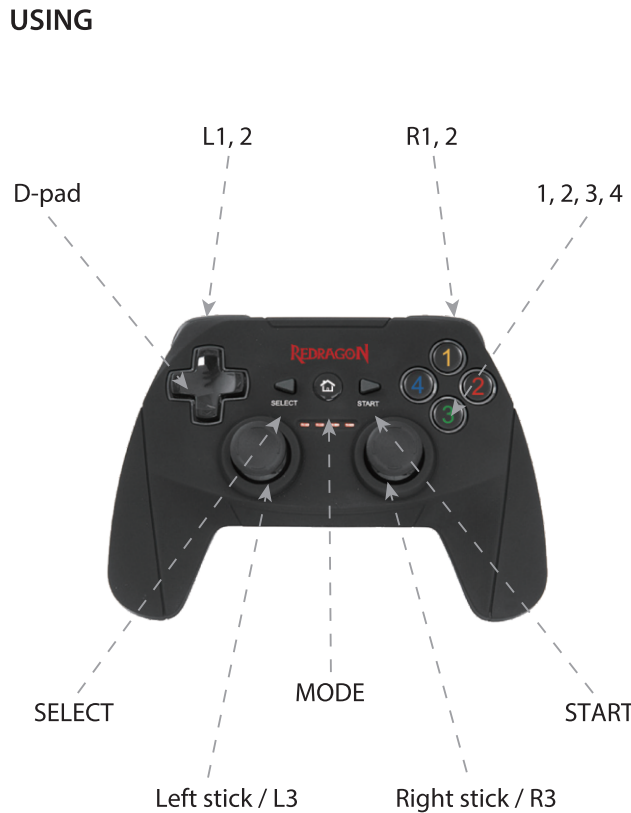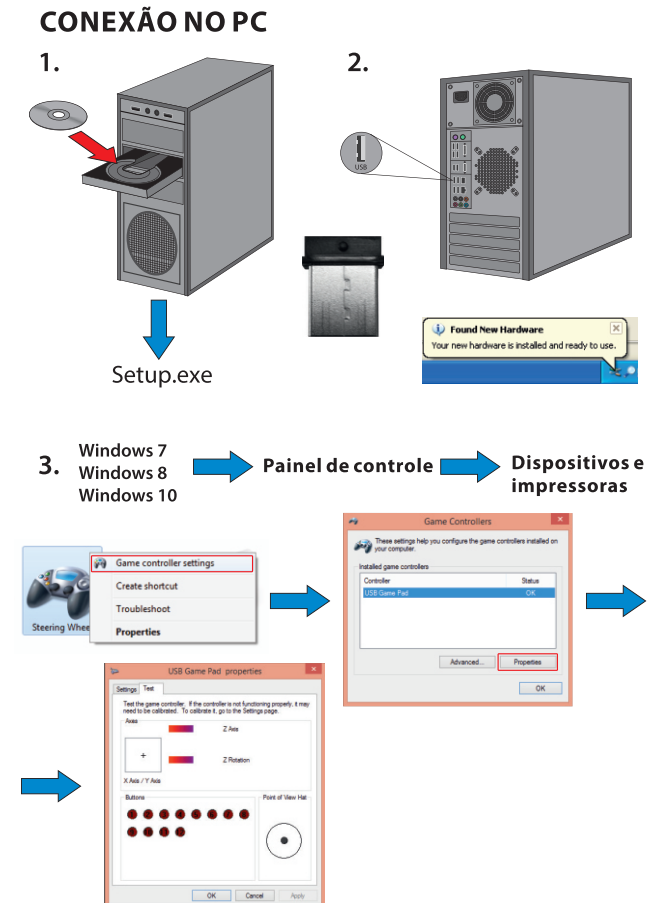[illegible]

材质：128g铜版纸，彩色双面印刷

折法：骑马钉