

US UK

Dear user


- Thank you for choosing the REDRAGON products. In order to protect your right and get better service, please pay attention to the following warranty rules:
1. Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
 2. Consumable parts (such as foot pads) and spare parts replacement are not included in the warranty.

Information:

Model: K518-RGB
Hot Swappable: NO
Type: Membrane keyboard
Custom Software: NO
Keyboard Material: ABS
Connection: Wired Type-c
Keycap: Laser-printed ABS+PC keycaps


Backlight: RGB
Length of cable: 1.5m
Polling Rate: 125Hz
Weight: 762±10g
NKRO: NO,only 26 keys
Size: 451X145X36mm
Battery: NO
System: windows XP/Vista/Win 7/Win 8 /Win 10/Win 11/MAC

Connection:




1

Indicator,port and Function Instruction:

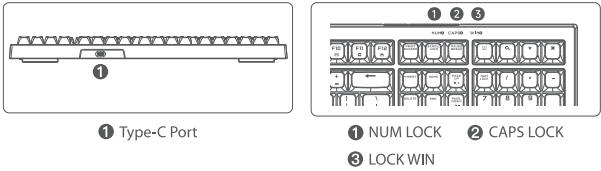

Shortcuts of RGB Settings:

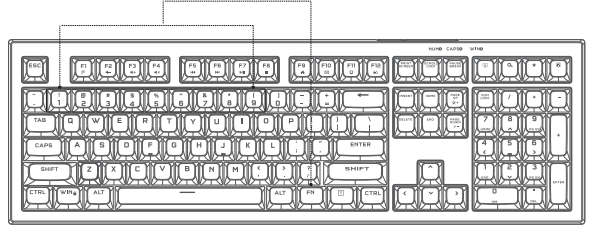

FN+0=Backlight ON/OFF
FN+PGUP=Brightness +
FN+←=Blinking Speed ↓
FN+WIN=Lock WIN

FN+1~9=Change 9-Type of Backlight Effect
FN+PGDN=Brightness -
FN+→=Blinking Speed ↑

FN+W Interchange the “WASD” and “↑ ← ↓ →” functions

WASD “↑ ← ↓ →”

2

FN Shortcuts:

FN+F1=Media player	FN+F7=Play/Pause
FN+F2=Volume -	FN+F8=Stop
FN+F3=Volume +	FN+F9=Home
FN+F4=Mute	FN+F10=E-mail
FN+F5=Previous track	FN+F11=My Computer
FN+F6=Next track	FN+F12=Lock kyeboard

AT ENITION:

1. When the keyboard is connected to the device,but the device cannot recognize and use it,please try another cable or change another USB port to connect it.
2. When the keyboard is connected to the device,but no words output,please try FN+F11 to unlock the keyboard.
3. When the keyboard is connected to the device,outputting normally,but the keyboard has no backlights,please try FN+PGUP/PGDN to adjust the backlight brightness of the keyboard,or press FN+0 to turn ON/OFF the backlights.
4. If the product is damaged beyond repair,please do not disassemble it or throw it into a fire ,It should be sent to a professional scrap station or special recycling box for disposal to avoid accidental risks.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

3



4

PT

Prezado usuário

Obrigado por escolher os produtos REDRAGON Para proteger seus direitos e oferecer um melhor atendimento, leia com atenção as regras da garantia, abaixo.

1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.
2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.


Informação:

Modelo: K518-RGB
Hot Swappable (substituição a quente): NÃO
Tipo: teclado de membrana
Software personalizado: NÃO
Material do Teclado: ABS
Conexão: com fio Tipo-C
Teclas: Keycaps em ABS+PC com impressão a laser


Retroiluminação: RGB
Comprimento do cabo: 1,5 m
Velocidade de leitura: 125 Hz
Peso: 762 ±10g
NKRO: NÃO, somente 26 teclas
Tamanho: 451 X 145 X 36 mm
Bateria: NÃO
Sistema: Windows XP/Vista/Win 7/Win 8 /Win 10/Win 11/ OS

5

Instruções de indicador, porta e função:

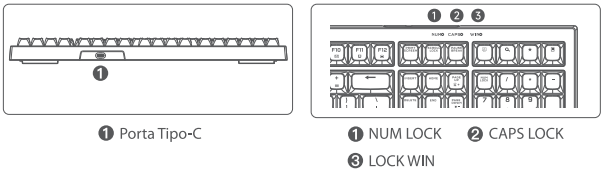

Atalhos para Configurações de RGB:

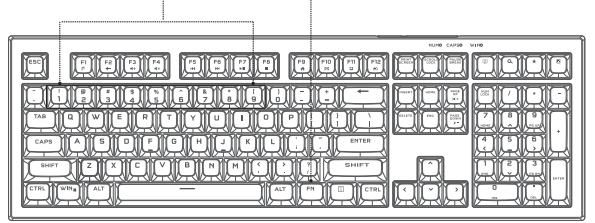

FN + 0 = Retroiluminação: LIGA/DESLIGA
FN + 1 a 9 = alterna entre nove tipos de efeitos de retroiluminação
FN + PGUP = Aumenta o brilho
FN + ← = Velocidade da luz intermitente ↓
FN + WIN = Lock WIN

FN + PGDN= Reduz o brilho
FN + → = Velocidade da luz intermitente ↑

FN+W Troca as funções de “WASD” e “↑ ← ↓ →”

WASD “↑ ← ↓ →”

6

Atalhos com FN:

FN + F1 = Media Player	FN + F7 = Tocar/Pausar
FN + F2 = Baixar o volume	FN + F8 = Parar
FN + F3 = Aumentar o volume	FN + F9 = Início
FN + F4 = Mudo	FN + F10 = Email
FN + F5 = Faixa anterior	FN + F11 = Meu computador
FN + F6 = Próxima faixa	FN + F12 = Bloqueio do teclado

AT ENÇÃO:

1. Se o teclado estiver conectado ao dispositivo, mas o dispositivo não o reconhecer nem permitir seu uso, tente usar outro cabo ou conectar em outra porta USB.
2. Se o teclado estiver conectado ao dispositivo, mas não houver saída de texto, experimente pressionar FN + F11 para desbloquear o teclado.
3. Se o teclado estiver conectado ao dispositivo e funcionando normalmente, mas sem retroiluminação, experimente FN + PGUP/PGDN para ajustar o brilho da retroiluminação do teclado ou pressione FN + 0 para ligar/desligar as luzes.
4. Se o produto estiver danificado sem possibilidade de reparo, não o desmonte nem o jogue no fogo. Envie para uma estação de descarte profissional ou deposite em uma caixa de reciclagem específica para evitar riscos acidentais.

Dúvidas frequentes

1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador.
2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em local seco e ventilado. É importante que o teclado seque naturalmente antes de utilizá-lo.

7



REDRAGON
CRUX
REDRAGON FULL SIZE WIRED
RGB MEMBRANE GAMING KEYBOARD



Please scan here to download user manual



Membrane Gaming Keyboard
User Manual

封面

型号	HL-K518-RGB 7393		备注：尺寸：100x100mm(折页) 材质：80g书写纸 印刷：单黑色双面印刷				Eastertimes Tech 
名称	说明书						
日期	2025-8-7						
页码	1 OF 1		文件编号				
绘图	王进	审核	香敏琪	核准		版本	A.0