封面

REDRAGON

GALATIN PRO

3 MODES CONNECTIONS WITH
LCD SCREEN GASKET MOUNTED MECHANICAL KEYBOARD

Please scan here to download user manual

Gaming Keyboard
User Manual

封底

REDRAGON

ANATEL
02981-24-16556

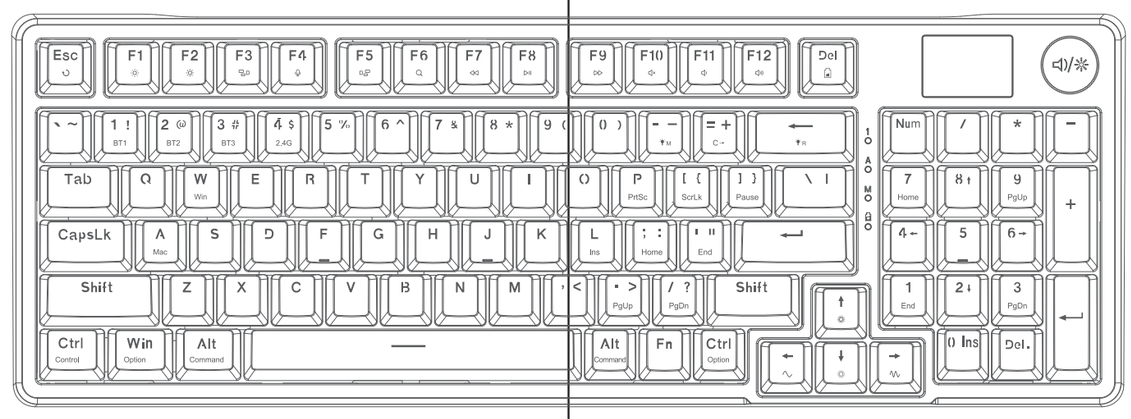

1

2

US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

3

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multi-ple devices

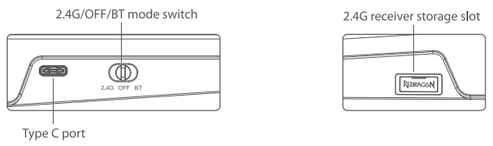

Wired Connection

2.4G/OFF/BT switch on "OFF".
Connect the keyboard to computer with USB cable.
The computer will recognize and configure the keyboard automatically.

2.4G Wireless Connection

1. 2.4G/OFF/BT switch on "2.4G", the LED M flashes in White, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically.
2. If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[4] for 3 seconds, the LED M flashes in White, plug the USB receiver into computer USB port, after paired the LED will turn to steady on.

4

BT Connection

1. 2.4G/OFF/BT switch on "BT".
2. Press [FN]+[1/2/3] to choose relevant BT channel, LCD screen will show " BT 1/2/3 Linking", then press and hold for [FN]+[1/2/3] 3 seconds, M flashes in Blue[1] or Red[2] or Green[3] quickly, LCD screen shows "BT1/2/3 Paring".
   Turn on BT function and searching for available devices, It will find "BT 5.0 Keyboard-1/2/3" device names. Select a BT name to pair, after paired the LED will turn to steady on.
3. To switch the BT connections between BT1/BT2/BT3, press [FN]+ [1/2/3].

Product Features

Backlight

1. The default 20 backlight patterns switch by press [FN] + [-_] to cycling switch the light patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 6 levels.
   Press [FN] + [↑ / ↓] to adjust backlight brightness, total 6 levels.
3. Backlight color switching: [FN] + [=+] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB (available on limited light patterns).
4. Preset gaming backlight mode& backlight DIY: Press [FN] + [Back space] to enter preset gaming mode, [ESC] [A] [S] [W] [D] [↑] [↓] [←] [→] lights on by default, to DIY backlight pattern, press [FN] + [Back space] again to start recording, LED indicators will flashing till the recording completed, Continuously press the key to select the color you want to set, once key light color setting are completed, press [FN] + [Back space] to save.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.)

5

Windows / MAC shortcut keys switching

[FN]+[W]: Windows shortcut keys [FN]+[A]: MAC shortcut keys

Commands of key combinations with [FN] key

[FN]+[P]=[PRTSC] [FN]+[{ [ ]=[SCRLK] [FN]+[}]]=[PAUSE]
[FN]+[L]=[INS] [FN]+[: ;]=[HOME] [FN]+[" ,]=[END]
[FN]+[. >]=[PGUP] [FN]+[/ ?]=[PGDN]

WINDOWS O.S.	MAC O.S.
FN+F1: Screen brightness -	F1: Screen brightness -/ FN+F1=F1
FN+F2: Screen brightness +	F2: Screen brightness +/ FN+F2=F2
FN+F3: Multiple tasks	F3: Multiple tasks / FN+F3=F3
FN+F4: Speech recognition	F4: Siri / FN+F4=F4
(O.S. win10 or newer)	F5: Show desktop / FN+F5=F5
FN+F5: Show desktop	F6: Search / FN+F6=F6
FN+F6: Search	F7: Pre track / FN+F7=F7
FN+F7: Pre track	F8: Play/Pause / FN+F8=F8
FN+F8: Play/Pause	F9: Next track / FN+F9=F9
FN+F9: Next track	F10: Mute / FN+F10=F10
FN+F10: Mute	F11: Volume down / FN+F11=F11
FN+F11: Volume -	F12:Volume up / FN+F12=F12
FN+F12: Volume +	

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

6

Knob& LCD screen

Turn the knob to adjust volume by default, press the knob button to enter LCD screen menu, turn the knob to select function options, press to enter relevant function option, when out of operating over 1min, the menu will automatic quit.

LCD screen menu options: Effect(Time/Gif), Colour(Backlight pattern), Colour(Backlight color), Brightness(Backlight brightness), Speed(Backlight speed), Language(CN/EN), Layout(WIN/MAC switch), Return(back).

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.
When battery is low, the backlight will turn off, the power LED will blink red slowly when pressed a key.
Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn to steady on Green.
Battery power indicator: Press and hold [FN] + [DEL] to show the battery level, release to back to current backlight mode.

Warning: Charging Input: 5V⎓2A

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboardsUSB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.

7

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

⚠ **CAUTION:**
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

8

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

9

PL

Drogi Użytkowniku

Dziękujemy za wybranie marki REDRAGON. Aby chronić swoje prawa i korzystać z lepszej obsługi klienta, zwróć uwagę na nasze warunki gwarancji.

1. Wokresie gwarancji naprawa jest objęta gwarancją w przypadku awarii spowodowanej problemami z obwodami elektrycznymi. Nie uwzględnia się szkód spowodowanych przez człowieka, takich jak demontaż, silne uderzenia, zanurzenie w wodzie, podłączanie do niewłaściwego prądu lub napięcia ani szkód spowodowanych przez klęski żywiołowe, takie jak pożar, powódź lub trzęsienie ziemi.
2. Części eksploatacyjne (np. stopka) oraz części zamienne nie są objęte naszą gwarancją.

10

Obsługiwane systemy operacyjne

Windows XP/Vista/Win 7/Win 8/Win 10/Win 11/Mac O.S.

Jak podłączyć klawiaturę do wielu urządzeń

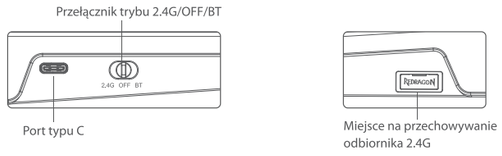

Połączenie przewodowe

Przełącznik 2.4G/OFF/BT ustaw na „OFF".
Podłącz klawiaturę do komputera za pomocą kabla USB.
Komputer automatycznie rozpozna i skonfiguruje klawiaturę.

Połączenie bezprzewodowe 2.4G

1. Przełącznik 2.4G/0FF/BT ustaw na „2.4G", dioda LED M miga na biało, podłącz odbiornik USB do portu USB komputera, klawiatura połączy się z komputerem automatycznie.
2. Jeśli połączenie automatyczne nie powiedzie się lub chcesz połączyć się z nowym urządzeniem, odłącz odbiornik USB, naciśnij i przytrzymaj [FN]+[4] przez 3 sekundy, dioda M miga na biało, podłącz odbiornik USB do portu USB w komputerze, po sparowaniu dioda zaświeci się na stałe.

11

Połączenie BT

1. Przełącznik 2.4G/OFF/BT ustaw na „BT".
2. Naciśnij [FN]+[1/2/3], aby wybrać odpowiedni kanał BT, wyświetlacz LCD pokaże „BT 1/2/3Linking", a następnie przytrzymaj [FN]+[1/2/3] przez 3 sekundy M miga szybko na niebiesko[1] lub czerwono[2] lub zielono[3], wyświetlacz LCD pokazuje „BT1/2/3 Paring". Włącz funkcję BT i wyszukaj dostępne urządzenia, znajdzie nazwy urządzeń „BT 5.0Keyboard-1/2/3". Wybierz nazwę BT do sparowania, po czym dioda LED zaświeci się na stałe.
3. Aby przełączyć połączenia BT między BT1/BT2/BT3, naciśnij [FN] + [1/2/3].

Cechy produktu

Podświetlenie

1. Domyślne 20 wzorów podświetlenia zmienia się po naciśnięciu [FN] + [-_] w celu cyklicznego przełączania podświetlenia.
2. Naciśnij [FN] + [←/→], aby dostosować prędkość rotacji podświetlenia, łącznie 6 poziomów.
   Naciśnij [FN] + [↑ / ↓], aby dostosować jasność podświetlenia, łącznie 6 poziomów.
3. Przełączanie kolorów podświetlenia: [FN] + [=+] do przełączania cyklicznego: Czerwony, Zielony, Niebieski, Żółty, Fioletowy, Cyjanowy, Biały, RGB (dostępne w ograniczonych wzorach podświetlenia).
4. Tryb podświetlenia gamingowego z ustawieniami domyślnymi i dostosowywanie podświetlenia: Naciśnij [FN] + [Back space], aby wejść w tryb gry, domyślnie świecą się [ESC] [A] [S] [W] [D][↑][↓][←][→], aby dostosować wzór podświetlenia. Naciśnij [FN] + [Back space] ponownie, aby rozpocząć nagrywanie, wskaźniki LED będą migać do zakończenia nagrywania. Naciśnij klawisz, aby wybrać kolor, który chcesz ustawić, po zakończeniu ustawiania koloru światła klawisza, naciśnij [FN] + [Back space] aby zapisać.

12

Blokada [WIN]

Naciśnij [FN] + [WIN], aby zablokować klawisz [WIN], ponownie naciśnij, aby go odblokować (NIE blokuj klawisza podczas używania na systemie MAC O.S.)

Przełączanie klawiszy skrótów Windows/MAC

[FN]+[W]: Skróty klawiszowe Windows [FN]+[A]: Skróty klawiszowe MAC

Polecenia kombinacji klawiszy z klawiszem [FN]

[FN]+[P]=[PRTSC] [FN]+[{ [ ]=[SCRLK] [FN]+[}]]=[PAUSE]
[FN]+[L]=[INS] [FN]+[: ;]=[HOME] [FN]+[" ,]=[END]
[FN]+[.>]=[PGUP] [FN]+[/ ?]=[PGDN]

WINDOWS:	MAC O.S.
FN+F1: Jasność ekranu-	F1: Jasność ekranu -/FN+F1=F1
FN+F2: Jasność ekranu +	F2: Jasność ekranu +/FN+F2=F2
FN+F3: Wiele zadań	F3: Multiple tasks/FN+F3=F3
FN+F4: Rozpoznawanie mowy	F4: Siri/FN+F4=F4
(O.S. win10 lub nowszy)	F5: Pokaż pulpit/FN+F5=F5
FN+F5: Pokaż pulpit	F6: Szukaj/FN+F6=F6
FN+F6: Wyszukiwanie	F7: Poprzedni utwór/FN+F7=F7
FN+F7: Poprzedni utwór	F8: Odtwarzaj/pauza/FN+F8=F8
FN+F8: Odtwarzaj/pauza	F9: Następny utwór/FN+F9=F9
FN+F9: Następny utwór	F10: Wycisz/FN+F10=F10
FN+F10: Wycisz	F11:Zmniejsz głośność/FN+F11=F11
FN+F11: Głośność-	F12:Zwiększenie głośności/FN+F12=F12
FN+F12: Głośność +	

13

Przywracanie ustawień fabrycznych

Przytrzymaj [FN] + [ESC] przez 3 sekundy.

Pokrętło i wyświetlacz LCD

Obróć pokrętło, aby domyślnie dostosować głośność, naciśnij przycisk pokrętła, aby wejść do menu ekranu LCD, obróć pokrętło, aby wybrać opcje funkcji, naciśnij, aby wejść do odpowiedniej opcji funkcji, po upływie 1 minuty menu automatycznie zamknie się.

Opcje menu ekranu LCD: Efekt(Czas/Gif), Kolor(Wzór podświetlenia), Kolor(Kolor podświetlenia), Jasność(Jasność podświetlenia), Szybkość(Szybkość podświetlenia), Język(CN/EN), Układ(Przełącznik WIN/MAC), Powrót(wstecz).

Tryb oszczędzania energii i jak ładować

W trybie połączenia bezprzewodowego/BT, gdy klawiatura nie jest używana przez ponad 3 minuty, podświetlenie klawiatury wyłączy się, aby oszczędzać baterię. Jeśli klawiatura pozostaje nieużywana przez ponad 30 minut, przejdzie w tryb oszczędzania energii. Naciśnij dowolny klawisz, aby ją wybudzić.

Gdy bateria jest słaba, podświetlenie się wyłączy, a dioda zasilania zacznie powoli migać na czerwono po naciśnięciu klawisza.

Podłącz klawiaturę do komputera, aby ją naładować. Podczas ładowania dioda zasilania świeci się na czerwono. Po pełnym naładowaniu zmienia kolor na zielony. Wskaźnik naładowania baterii: Naciśnij i przytrzymaj [FN] + [DEL], aby sprawdzić poziom naładowania baterii, a potem zwolnij, aby wrócić do bieżącego trybu podświetlenia.

Ostrzeżenie: Prąd ładowania: 5V ⎓ 2A maks

Często zadawane pytania

1. Jeśli klawiatura nie odpowiada, sprawdź, czy kabel USB klawiatury jest prawidłowo podłączony do odpowiedniego złącza USB w komputerze lub spróbuj użyć innego złącza USB w komputerze.
2. W przypadku rozlania płynu na klawiaturę należy natychmiast odłączyć kabel klawiatury USB od komputera. Wytrzyj nadmiar płynu i umieść klawiaturę w ciepłym i przewiewnym miejscu. Przed następnym użyciem upewnij się, że klawiatura naturalnie wyschła.

14

型号	HL-K719PK-RGB-PRO/7309	备注：尺寸：100x100mm(折页) 材质：80g书写纸 印刷：单黑色双面印刷					
名称	说明书						
日期	2025-8-16						
页码	1 OF 1	文件编号					
绘图	邓子松	审核	香敏琪	核准		版本	A.0

Easterntimes Tech