


MORX BLADE

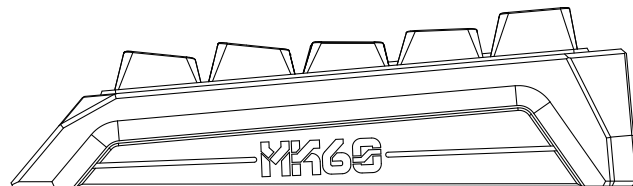

M K 6 S

User Manual

Product list specifications

01

Product Name: MK60 Hall Effect Keyboard

Model: MorkBlade MK60

Connection: Single-mode wired USB Type-C

Keyboard Type: Hall Effect keyboard

Rated Power: 5V--500mA

Polling Rate: 8K


Scan Rate: 2000K

Key Layout: 60% compact layout with 61 keys

Keycaps: PBT/PC frosted translucent

Backlighting: 16.8 million-color RGB

Dimensions: 303mm × 125mm × 37mm

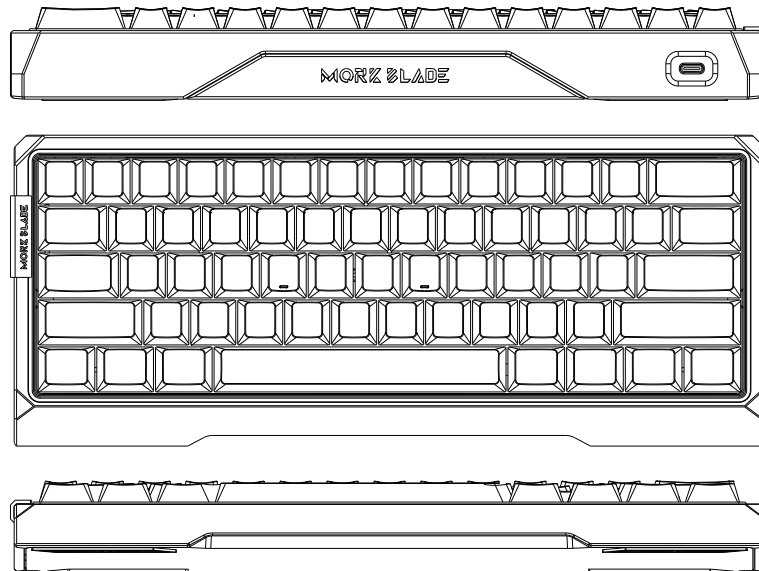


Product List (Specific accessory list is subject to the e-commerce page)

- MK60x1
- USB-C Two-Stage Latch 8K Hall Effect Dedicated Data Cable x1
- Custom 2-in-1 Switch and Keycap Puller x1
- Custom Switches x4
- MorkBlade Custom Brand Feet x2
- MorkBlade Custom Gasket Cushion Silicone Strips (Spare) x2
- Bottom Shell Locking Screws x6
- Top Cover Locking Screws x8
- Product Manual x1
- Quick Start Card x1

FN combination function

02

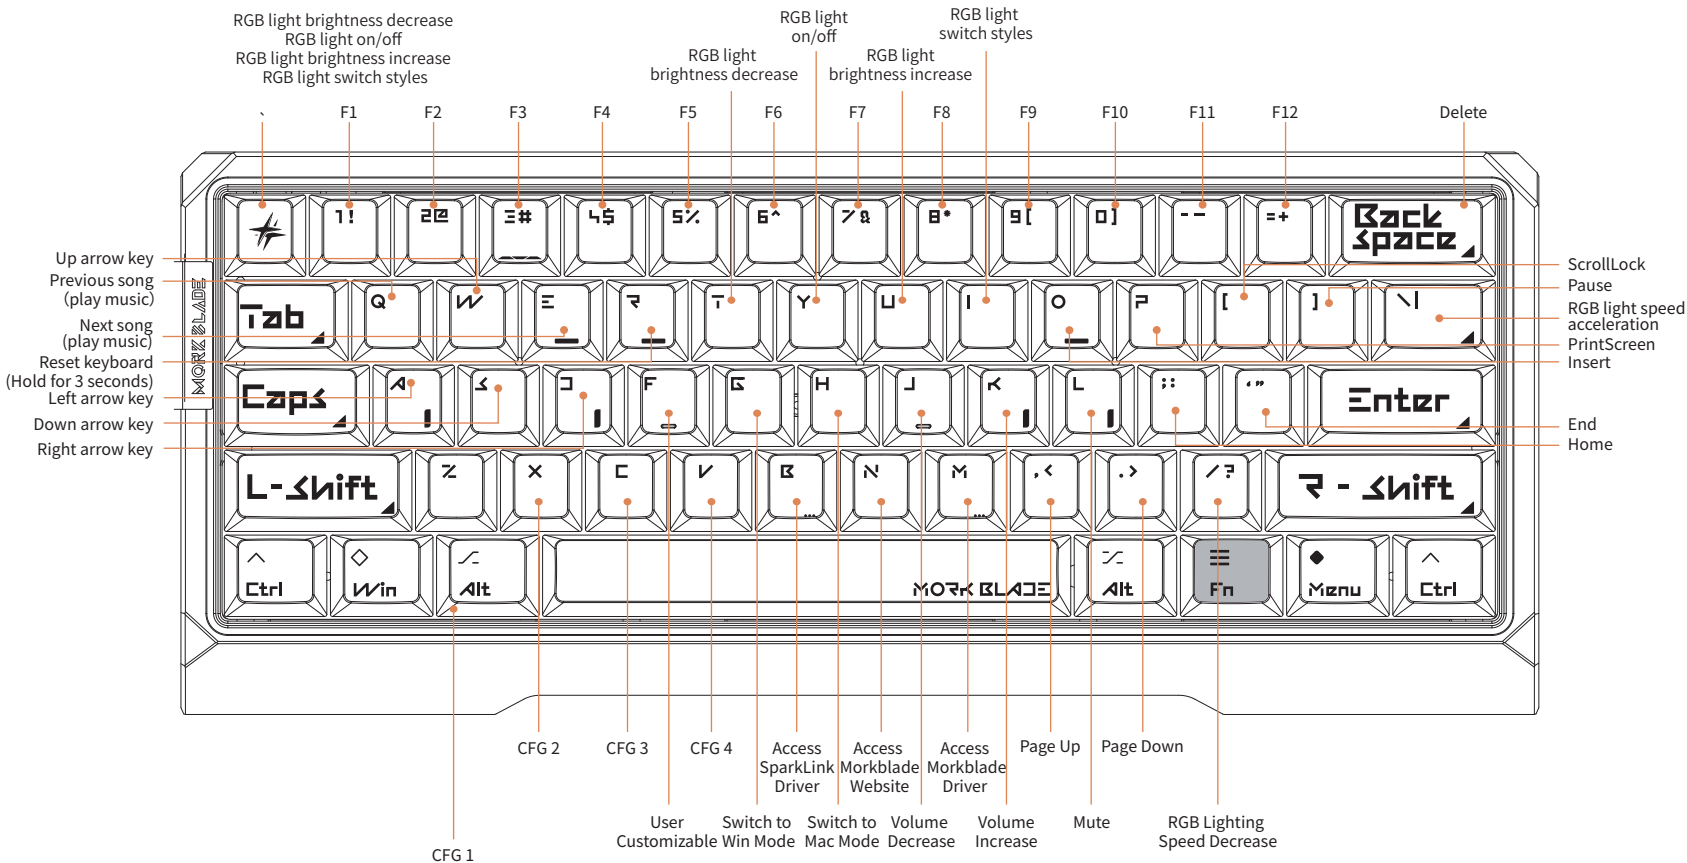

Device connection

03

Wired mode

Connect the USB cable of this product to the keyboard Type-C interface and the device USB-A interface. If the keyboard light is on, the connection is successful

Special FN key function description

04

Factory reset

- Fn+R: Long press for 3 seconds, the keyboard's overall lights will flash and then return to factory mode

Switch preset configuration

- Combine Fn+Z=Configuration 1, Fn+X=Configuration 2, Fn+C=Configuration 3, Fn+V=Configuration 4

Switch Windows/Mac system mode

- Fn+H switch Mac system win key white light prompt for 1 second

Lock Win key

- Fn+Win: Short press once to turn on the Win key, and the red light will remain on. When locking, press the Win key in combination once to unlock

I want to customize keys, use macro functions, and modify more RGB lighting effects. What should I do?


- Visit the official website www.morkblade.com to obtain the latest web-based driver. The web driver allows you to configure RT actuation and other hall effect functions, customize keys, edit macros, and modify RGB lighting effects. To experience the full keyboard functionality, please use the official driver.
- Morkblade Web Driver
www.morkblade.games

Driver download and firmware upgrade

Visit the Morkblade official website: www.morkblade.tech

The latest web driver can be used and firmware upgrades can be performed to experience the keyboard's full functionality.

Official Douyin video
tutorial by Mork Blade

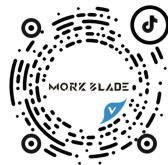

**** Australian Consumer Law**** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**** Australian Compliance Information**** This product complies with all applicable Australian safety and regulatory requirements. Responsible Supplier: ELECTRONIC REBELLION PTY LTD ABN: 73 690 566 495

Address: 63 Victoria Cres, Abbotsford VIC 3067

Cleaning Instructions: Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.

**** Ergonomic Health and Safety Guide**** **WARNING:** Preventing Musculoskeletal Disorders Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, and serious long-term injuries known as musculoskeletal disorders (MSDs). To minimize the risk: 1. Maintain a neutral wrist posture: Keep your wrist straight; do not bend it up, down, or to the side. Your forearm should be roughly parallel to the floor or slightly angled downward. 2. Position your device correctly: Place the keyboard directly in front of you and the mouse to your side. Avoid hyperextension. 3. Change your posture: Change your posture frequently. Aim for short breaks, standing, and stretching at least every 30 minutes. 4. Listen to your body: If you experience any persistent pain, tingling, or numbness, discontinue use and consult a healthcare professional.

Battery Disposal (Australia): Do not dispose of used batteries in your household waste. In Australia, batteries must be recycled. Take them to an authorised battery collection point. To find your nearest drop-off location, visit the B-cycle website or your local council's recycling information page.

WARNING: Choking and Battery Hazard. This product and its battery are not toys. Keep them out of reach of small children at all times. The product contains small components that may pose a choking hazard. Batteries, if swallowed, can cause severe internal chemical burns and can be fatal. Seek immediate medical attention if a battery is suspected to be swallowed.